



Hitching Your Burley to Your Bicycle

The Burley® standard trailer hitch was designed to quickly and safely attach to virtually all types of bicycles. It is attached to the left rear dropout (the non-chainring side) of your bicycle.

1. Remove the quick release lever assembly from your bike and set it aside.
2. Line up the hole on the flat side of the hitch upper arm with the left rear dropout hole.
3. Reassemble the quick release assembly through the hitch and dropout, but don't tighten it yet.
4. Slide the hitch receiver end of the tongue between the two hitch side arms, and line up the holes. The hitch should clear any racks, bags, or fittings you have on your bicycle. If there is any interference, contact your Authorized Burley Dealer.
5. Open the retaining pin and insert the pin through the holes.
6. Rotate the pin's spring clip and close the pin.
7. Now tighten the quick release lever, with the lever pointing to the rear of the bike. When properly adjusted, you will feel resistance halfway through tightening the lever (when the lever is pointing straight out away from the bike).
8. Wrap the safety strap around the inside of the chain stay twice and then over the hitch body. Fasten the hook to the D-ring on the underside of the tongue end.

⚠ WARNING

The quick release lever must be in the closed position. Do not operate the trailer without the hitch safety strap properly installed. A dangling safety strap can contact the spokes and damage the rear wheel or cause an accident, resulting in serious injury. The hitch must not interfere with racks, bags, or fittings. Inspect the hitch and tongue frequently for damage or loose fasteners. Interfering parts or a damaged hitch can cause an accident, resulting in serious injury.

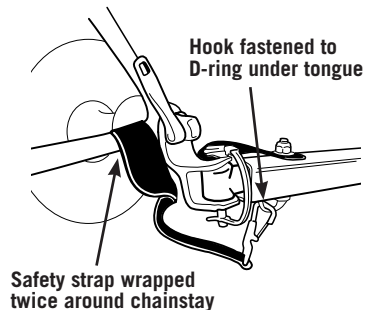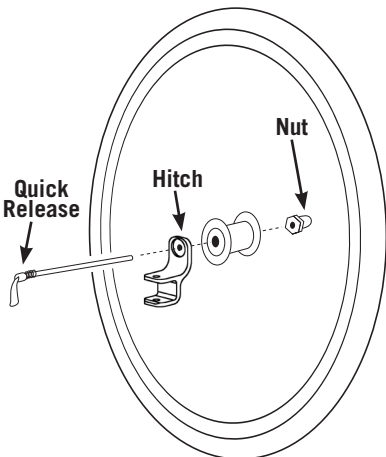

BURLEY®